Enlightened Technology s.

4300 WINDFERN RD SUITE 100 - HOUSTON TX 77041-8943 VOICE (713) 973-6905 - FAX (713) 973-9352 web: www.twrlighting.com

IMPORTANT!!!

PLEASE TAKE THE TIME TO FILL OUT THIS FORM COMPLETELY. FILE IT IN A SAFE PLACE. IN THE EVENT YOU EXPERIENCE PROBLEMS WITH OR HAVE QUESTIONS CONCERNING YOUR CONTROLLER, THE FOLLOWING INFORMATION IS NECESSARY TO OBTAIN PROPER SERVICE AND PARTS.

MODEL #	AA0M3XFRIND230V
SERIAL#	
PURCHASE DATE	
PURCHASED FROM	

Enlightened Technology SM AA0M3XFRIND230V CONTROLLER

TABLE OF CONTENTS

1.0	GEN	IERAL INFORMATION	1
2.0	INST	TALLATION	2
	2.1	MOUNTING THE CONTROLLER CABINET	
	2.2	EXTERNAL PHOTOCELL WIRING	
	2.3	POWER WIRING	3
		SIDELIGHT WIRING	3
		SIDELIGHT ALARM WIRING	
3.0	THE	ORY OF OPERATION	6
	3.1	POWER SUPPLY	6
	3.2	SIDELIGHTS	
4.0	MAII	NTENANCE GUIDE	7
	4.1	RED OBSTRUCTION LIGHTING	7
	4.2	L-810 LAMP REPLACEMENT	7
	4.3	CONTROLLER	7
	4.4	PHOTOCELL	7
5.0	MAJ	OR COMPONENTS PARTS LIST	
6.0	SUG	GESTED SPARE PARTS LIST	
WAR	RANT	Y & RETURN POLICY	
RFTI	IRN M	IERCHANDISE AUTHORIZATION (RMA) FORMS	

Enlightened Technology SM AA0M3XFRIND230V CONTROLLER

APPENDIX

CHASSIS LAYOUT	1278-R
CHASSIS SCHEMATIC	1278-S
L-810 OL-2 SIDELIGHT ASSEMBLY DETAIL	310 (REV A)
AA0 TOWER LIGHTING KIT	T1463
JUNCTION BOX	100089 (REV A)
WARRANTY & RETURN POLICY	
RETURN MERCHANDISE AUTHORIZATION (RMA) FOR	RMS

Enlightened Technology ** AA0M3XFRIND230V CONTROLLER

1.0 GENERAL INFORMATION

The TWR Lighting, Inc. Model AA0M3XFRIND230V Controller is for applications of three (3) L-810 double obstruction light fixtures with the option of transferring between the primary and secondary lamp.

The obstruction lights burn steady. Each fixture requires two (2) 116 watt 230V AC bulbs (116A21TS230V).

A by-pass switch (SW1) allows the controller to be turned on during daylight hours without covering the photocell.

The photocell is a 3 blade, twist to lock type.

Power supplied to the controller shall be 230V AC 50 Hz single phase.

Controller functions that are monitored by remote alarms in the form of dry contact closures (Form C) are as follows:

POWER FAILURE Monitors 230V AC to the controller. Alarms in the

event of power failure, or tripped circuit breaker.

OBSTRUCTION LIGHTS Will give an alarm when a main lamp within any of the

OL2 fixtures fails, and that particular indicator will turn

on.

Enlightened Technology SAR AAOM3XFRIND230V CONTROLLER

2.0 INSTALLATION INSTRUCTIONS

2.1 MOUNTING THE CONTROLLER CABINET

(Refer to drawing 1278-R)

- 2.1.1 The power supply control cabinet can be located at the base of the structure, or in an equipment building. Mounting footprints are showing on drawing 1278-R. Power wiring to the control cabinet should be in accordance with local methods and National Electrical Codes (NEC).
- 2.1.2 If the control cabinet is mounted inside an equipment building, the photocell should be mounted vertically outside the building above the eaves facing north. Wiring from the photocell socket to the control cabinet should consist of one (1) each; red, black, and white wires. The white wire is connected to the socket terminal marked "COM," the black wire is connected to the socket terminal marked "B," and the red wire is connected to the socket terminal marked "R." As above, the photocell should be positioned so that it does not "see" ambient light, which would prevent it from switching to the nightmode.
- 2.1.3 If the control cabinet is mounted outside an equipment building, the photocell should be mounted vertically so the photocell is above the control cabinet. Care must be taken to assure that the photocell does not "see" any ambient light that would prevent it from switching into the nightmode. The photocell wiring is the same as in 2.1.2.
- 2.1.4 The wiring from the photocell, the service breaker, and the sidelights should enter the control cabinet through the water-tight connectors in the bottom of the cabinet. Inside the cabinet, the connections will be made on the terminal strip and circuit breakers located at the bottom of the chassis. These connections are made as follows:

Enlightened Technology ** AA0M3XFRIND230V CONTROLLER

2.2 EXTERNAL PHOTOCELL WIRING

(Refer to drawing 1278-R)

- 2.2.1 Connect the <u>BLACK</u> wire from the photocell to terminal block (TB2) marked "L."
- 2.2.2 Connect the <u>RED</u> wire from the photocell to terminal block (TB2) marked "SSR."
- 2.2.3 Connect the <u>WHITE</u> wire from the photocell to terminal block (TB2) marked "N."

2.3 POWER WIRING

(Refer to drawing 1278-R)

- 2.3.1 Power wiring to the control cabinet should be in accordance with local methods and National Electrical Codes (NEC).
- 2.3.2 Circuit breaker needs to be rated at 15 amps.
- 2.3.3 Connect incoming 230V AC "HOT" to terminal block (TB1) marked "L."
- 2.3.4 Connect neutral to one (1) of the terminal blocks (TB1) marked "N."
- 2.3.5 Connect the AC ground to the ground lug located to the left of TB2.

2.4 SIDELIGHT WIRING

(Refer to drawing 1278-R)

- 2.4.1 Connect the wire from the main lamp of the first OL2 fixture to the circuit breaker marked "S1P."
- 2.4.2 Connect the wire from the secondary lamp of the first OL2 fixture to the circuit breaker marked "S1S."
- 2.4.3 Connect the wire from the main lamp of the second OL2 fixture to the circuit breaker marked "S2P."

Enlightened Technology ** AA0M3XFRIND230V CONTROLLER

- 2.4.4 Connect the wire from the secondary lamp of the second OL2 fixture to the circuit breaker marked "S2S."
- 2.4.5 Connect the wire from the main lamp of the third OL2 fixture to the circuit breaker marked "S3P."
- 2.4.6 Connect the wire from the secondary lamp of the third OL2 fixture to the circuit breaker marked "S3S."
- 2.4.7 Connect the neutral wire(s) to the terminal block (TB1) marked "N."
- 2.4.8 Connect the ground wires to the ground lug located to the right of the circuit breakers.

2.5 SIDELIGHT ALARM WIRING

(Refer to drawings 1278-R and 1278-S)

- 2.5.1 Independent contact closures are provided for: Power Failure, OL2 Main Lamp Burnouts.
- 2.5.2 Alarm wiring. To utilize the dry contacts, the customer will need four (4) pairs of wires to interface with the alarm device. Connect customer alarm commons to terminal block TB4, terminal #1. The remaining wires from each pair will terminate as follows:
 - 2.5.2.1 POWER FAILURE Connect alarm wire to terminal block TB4, terminal #2, for normally open, or terminal #3, for normally closed monitoring.
 - 2.5.2.2 S1P ALARM Connect alarm wire to terminal block TB4, terminal #4, for normally open, or terminal #5, for normally closed monitoring.
 - 2.5.2.3 S2P ALARM Connect alarm wire to terminal block TB4, terminal #6, for normally open, or terminal #7, for normally closed monitoring.

Enlightened Technology MAOM3XFRIND230V CONTROLLER

2.5.2.4 S3P ALARM Connect alarm wire to terminal block TB4, terminal #8, for normally open, or terminal #9, for normally closed monitoring.

Enlightened Technology SAR AAOM3XFRIND230V CONTROLLER

3.0 THEORY OF OPERATION

3.1 POWER SUPPLY

230V AC enters the controller from the circuit breaker panel, and PL1 indicator will be on. Line sits at the PRD waiting to be energized, and also keeps the power failure relay K1 energized. When the 6390-FAA photocell is activated, line energizes the coil of the PRD. This can also be accomplished by using the photocell by-pass switch (SW1).

3.2 **SIDELIGHTS**

Line (LD) is sent to modules M1-M3, and through the toridal sensing coils. M1-M3 are the current sensors for all of the main lamps. If the main lamp within an OL2 fixture burns out, then that particular module will send 230V to the secondary lamp, along with a failure indicator, as well as the onboard relay coil, which will cause a contact closure for that fixture, and a secondary indicator will turn on for that particular failure.

* Once the cause of the failure has been corrected, the unit will need to be reset by shutting off the service breaker to the unit.

Enlightened Technology ** AA0M3XFRIND230V CONTROLLER

4.0 MAINTAINANCE GUIDE

4.1 RED OBSTRUCTION LIGHTING

The only required maintenance needed to be performed is replacement of the lamps in the L-810 fixture. Lamps should be replaced after being operated for not more than 75 percent of the rated life, or immediately upon failure, as per Advisory Circular 70/7460-1K. By following these instructions, maximum safety and performance can be achieved.

TOOLS REQUIRED: NONE

4.2 <u>L-810 LAMP REPLACEMENT</u>

- 4.2.1 Unclasp the two (2) latches and allow the bail to recline backward.
- 4.2.2 Lift the lens up and over the lamp, allowing the lens to hang from the safety cable.
- 4.2.3 Unscrew the lamp counter clockwise and remove.
- 4.2.4 Install the new lamp by screwing the lamp clockwise.
- 4.2.5 Re-install the lens, making sure it is seated properly on the base.
- 4.2.6 Re-clasp the two (2) latches

4.3 **CONTROLLER**

No scheduled maintenance is required. Perform on an as needed basis only.

4.4 **PHOTOCELL**

The photocell is a sealed unit. No maintenance is needed nor required, other than replacement as needed.

Enlightened Technology SAR AAOM3XFRIND230V CONTROLLER

5.0 MAJOR COMPONENTS PARTS LIST

QTY PART NUMBER DESCRIPTION

QII	I AN I NOMBEN	DESCRIPTION	
1	6390-FAA	120 – 240V AC PHOTOCELL	
1	VJ1614HWPL2	ENCLOSURE	
7	8WA1204	TERMINAL BLOCK (TB1 & TB2)	
6	S261-D1	1 amp CIRCUIT BREAKER (S1P - S3S)	
2	8WA1808	END STOP	
1	STJ01002	PHOTOCELL BYPASS SWITCH (SW1)	
1	V275LA20A	METAL OXIDE VARISTOR (MOV 1, MOV 2)	
1	9KE-240V	SPDT 240V AC RELAY (K1)	
3	CM-250	SIDELIGHT ALARM MODULES (M1 – M3)	
3	9KE1LAMP-240	240V 1 LAMP RELAY (K2 – K4)	
1	PRD7AYO-240V	POWER RELAY 240V (PRD)	
1	19411235M	GREEN LED INDICATOR FOR POWER ON (PL1)	
3	19411230M	RED LED INDICATOR FOR SIDELIGHT PRIMARY FAILURE (PL2 – PL4)	
3	19411230M	RED LED INDICATOR FOR SIDELIGHT SECONDARY "ON" (PL5 – PL7)	
2	TERMBLK141-10	10 PART TERMINAL BLOCK (TB3, TB4)	
4	PB27E122	OCTAL RELAY SOCKETS	
1	SSPIGTAIL	SUN SWITCH PIGTAIL	

Enlightened Technology SAR AAOM3XFRIND230V CONTROLLER

6.0 SUGGESTED SPARE PARTS LIST

QTY	PART NUMBER	DESCRIPTION
1	6390-FAA	120 – 240V AC PHOTOCELL
1	CM-250	SIDELIGHT ALARM MODULES (M1 – M3)
1	9KE-240V	SPDT 240V AC RELAY (K1)
1	9KE1LAMP-240	240V 1 LAMP RELAY (K2 – K4)

Enlightened Technology SAR AAOM3XFRIND230V CONTROLLER

Warranty & Return Policy

TWR Lighting, Inc. ("TWR") warrants its products (other than "LED Product") against defects in design, material (excluding incandescent bulbs) and workmanship for a period ending on the earlier of two (2) years from the date of shipment or one (1) year from the date of installation.

TWR Lighting, Inc. ("TWR") warrants its "LED Product" against defects in design, material and workmanship for a period of five (5) years from the date of shipment. TWR, at its sole option, will, itself, or through others, repair, replace or refund the purchase price paid for "LED Product" that TWR verifies as being inoperable due to original design, material or workmanship. All warranty replacement "LED Product" is warranted only for the remainder of the original warranty of the "LED Product" replaced. Replacement "LED Product" will be equivalent in function, but not necessarily identical, to the replaced "LED Product."

TWR Lighting, Inc. ("TWR") warrants its "LED Product" against light degradation for a period of five (5) years from the date of installation. TWR, at its sole option, will, itself, or through others, repair, replace or refund the purchase price paid for "LED Product" that TWR verifies as failing to meet 70% of the minimum intensity requirements as defined in the FAA Advisory Circular 150/5345-43E dated 10/19/95. All warranty replacement "LED Product" is warranted only for the remainder of the original warranty of the "LED Product" replaced. Replacement "LED Product" will be equivalent in function, but not necessarily identical, to the replaced "LED Product."

Replacement parts (other than "LED Product") are warranted for 90 days from the date of shipment.

Conditions not covered by this Warranty, or which might **void** this Warranty are as follows:

- Improper Installation or Operation
- Misuse
- Abuse
- Unauthorized or Improper Repair or Alteration
- Accident or Negligence in Use, Storage, Transportation, or Handling
- Any Acts of God or Nature
- Non-OEM Parts

The use of non-OEM parts or modifications to original equipment design will void the manufacturer warranty and could invalidate the assurance of complying with FAA requirements as published in Advisory Circular 150/5345-43.

Field Service – **Repairs are warranted for 90 days from the date of service**, except where TWR has made recommendations that were not adhered to that may cause premature failure on previous repairs. Labor, Travel, and Tower Climb are not covered under warranty. Customer shall be obligated to pay for all incurred charges not related to warranty. All warranty repairs are performed by trained TWR personnel, or dispatched through an extensive network of certified and insured Service Representatives.

Enlightened Technology ** AA0M3XFRIND230V CONTROLLER

Return Policy

Return Terms – You must first contact our Customer Service Department at **713-973-6905** to acquire a Return Merchandise Authorization (RMA) number in order to return the product(s). Please have the following information available when requesting an RMA number:

- The contact name and phone number of the tower owner
- The contact name and phone number of the contractor
- The site name and number
- The part number(s)
- The serial number(s) (if any)
- A description of the problem
- The billing information
- The Ship To address

This RMA number must be clearly visible on the outside of the box. If the RMA number is not clearly labeled on the outside of the box, your shipment will be refused. Please ensure the material you are returning is packaged carefully. The warranty is null and void if the product(s) are damaged in the return shipment.

All RMAs must be received by TWR LIGHTING, INC., 4300 WINDFERN RD #100, HOUSTON TX 77041-8943, within 30 days of issuance.

Upon full compliance with the Return Terms, TWR will replace, repair and return, or credit product(s) returned by the customer. It is TWR's sole discretion to determine the disposition of the returned item(s).

<u>Replacements</u> – Replacement part(s) will be shipped and billed to the customer for product(s) considered as Warranty, pending return of defective product(s). When available, a certified reconditioned part is shipped as warranty replacement with a Return Merchandise Authorization (RMA) number attached. Upon receipt of returned product(s), inspection, testing, and evaluation will be performed to determine the cause of defect. The customer is then notified of the determination of the testing.

- Product(s) that is deemed defective and/or un-repairable and covered under warranty a credit will be issued to the customer's account.
- Product(s) found to have no defect will be subject to a \$60.00 per hour testing charge
 (1 hour minimum), which will be invoiced to the customer. At this time, the
 customer may decide to have the tested part(s) returned, and is responsible for the
 return charges.
- Product(s) under warranty, which the customer does not wish returned, the customer will be issued a credit against the replacement invoice.

Enlightened Technology ** AA0M3XFRIND230V CONTROLLER

Warranty & Return Policy

(continued)

Repair & Return — A Return Merchandise Authorization (RMA) will be issued for all part(s) returned to TWR for repair. Upon receipt of returned product(s), inspection, testing and evaluation will be performed to determine the cause of defect. The customer is then notified of the determination of the testing. If the returned part(s) is deemed un-repairable, or the returned part(s) is found to have no defect, the customer will be subject to a \$60.00 per hour testing charge (1 hour minimum), which will be invoiced to the customer. Should the returned parts be determined to be repairable, a written estimated cost of repair will be sent to the customer for their written approval prior to any work being performed. In order to have the tested part(s) repaired and/or returned, the customer must issue a purchase order and is responsible for the return shipping charges.

<u>Return to Stock</u> – Any order that is returned to TWR for part(s) ordered incorrectly by the customer, or unneeded upon receipt, the customer is required to pay a **20% restocking fee**. A credit will be issued once it is determined that the Return Terms are met.

<u>Credits</u> – Credits are issued once it is determined that all of the Warranty and Return Terms are met. All credits are processed on Fridays. In the event a Friday falls on a Holiday, the credit will be issued on the following Friday.

<u>Freight</u> – All warranty replacement part(s) will be shipped via ground delivery and paid for by TWR. Delivery other than ground is the responsibility of the customer.

REMEDIES UNDER THIS WARRANTY ARE LIMITED TO PROVISIONS OF REPLACEMENT PARTS AND REPAIRS AS SPECIFICALLY PROVIDED. IN NO EVENT SHALL TWR BE LIABLE FOR ANY OTHER LOSSES, DAMAGES, COSTS OR EXPENSES INCURRED BY THE CUSTOMER, INCLUDING, BUT NOT LIMITED TO, LOSS FROM FAILURE OF THE PRODUCT(S) TO OPERATE FOR ANY TIME, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, INCLUDING ALL PERSONAL INJURY OR PROPERTY DAMAGE DUE TO ALLEGED NEGLIGENCE, OR ANY OTHER LEGAL THEORY WHATSOEVER. THIS WARRANTY IS MADE BY TWR EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, WHETHER EXPRESSED OR IMPLIED. WITHOUT LIMITING THE GENERALITY OF THE FORGOING, TWR MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS OF THE PRODUCT(S) FOR ANY PARTICULAR PURPOSE. TWR EXPRESSLY DISCLAIMS ALL OTHER WARRANTIES.

Enlightened Technology SM AA0M3XFRIND230V CONTROLLER

RETURN MERCHANDISE AUTHORIZATION (RMA) FORM

RMA#:	_DATE:
CUSTOMER:	
CONTACT:	_PHONE NO.:
ITEM DESCRIPTION (PART NO.):_	
MODEL NO.:	SERIAL NO.:
ORIGINAL TWR INVOICE NO.:	DATED:
DESCRIPTION OF PROBLEM:	
SIGNED	DATE NEEDED
RETURN ADDRESS:	


PLEASE RETURN PRODUCT TO: 4300 WINDFERN RD #100 HOUSTON TX 77041-8943


Enlightened Technology SM AA0M3XFRIND230V CONTROLLER


RETURN MERCHANDISE AUTHORIZATION (RMA) FORM


RMA#:	_DATE:
CUSTOMER:	
CONTACT:	_PHONE NO.:
ITEM DESCRIPTION (PART NO.):_	
	_SERIAL NO.:
	DATED:
DESCRIPTION OF PROBLEM:	
SIGNED	DATE NEEDED
RETURN ADDRESS:	


PLEASE RETURN PRODUCT TO: 4300 WINDFERN RD #100 HOUSTON TX 77041-8943

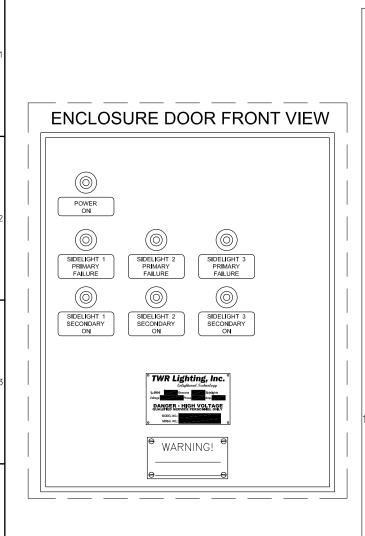

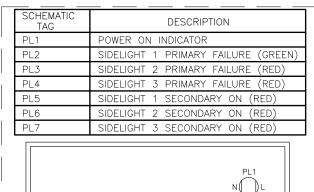

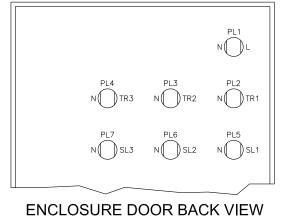

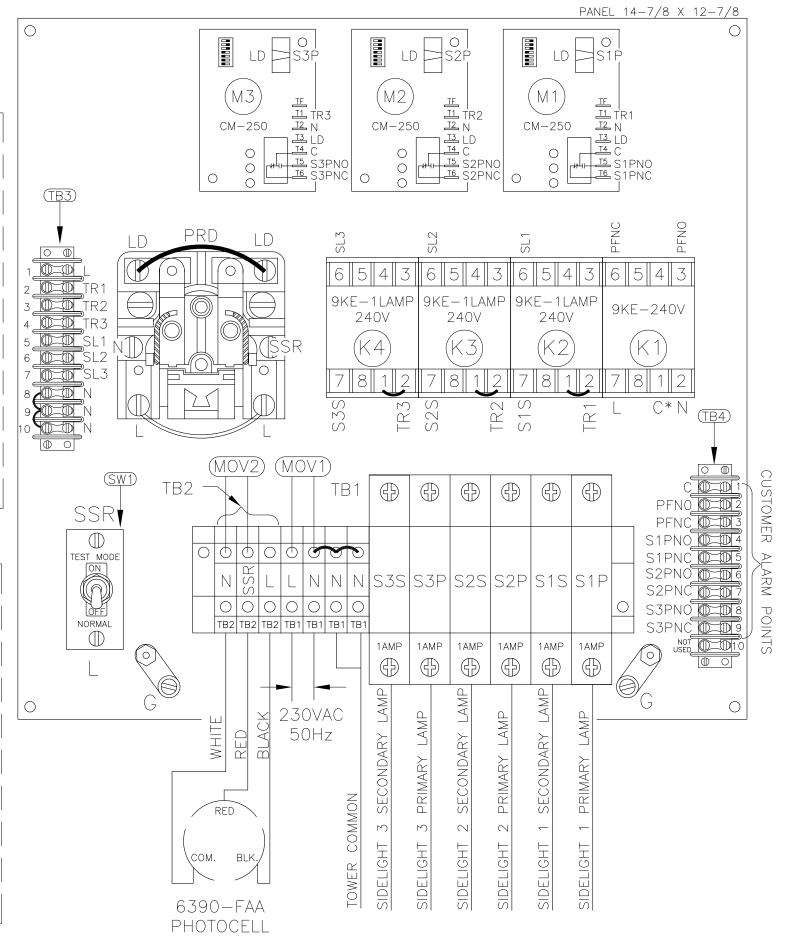

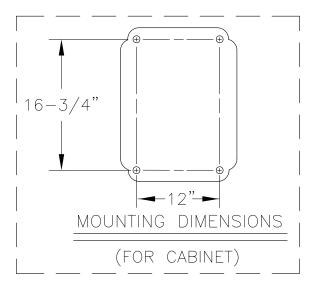

NOTES:

1. WIRES ARE CONNECTED LETTER TO LETTER. (EXAMPLE) L TO L TO L.

*CUSTOMER ALARM POINTS

C = ALARM COMMON NC = NORMALLY CLOSE NO = NORMALLY OPEN

PFNO/PFNC = POWER FAILURE

S1PNO = SIDELIGHT 1 PRIMARY FAILURE NO S1PNC = SIDELIGHT 1 PRIMARY FAILURE NC S2PNO = SIDELIGHT 1 PRIMARY FAILURE NO S2PNC = SIDELIGHT 1 PRIMARY FAILURE NO S3PNO = SIDELIGHT 1 PRIMARY FAILURE NO S3PNC = SIDELIGHT 1 PRIMARY FAILURE NC

* ALARM OUTPUTS ARE FORM C

AAOM3XFRIND230V CHASSIS LAYOUT

TWR Lighting, Inc.
ENGINEER Enlightened Technology

DRAWN BY

V.HERNANDEZ

DATE

02/10/12

SCALE

N.T.S.

SHEET SIZE SHEET QTY.
B 1 OF 1


DWG. NO.
1278-R


The use of non-OEM parts or modifications to original equipment design will void the manufacturer warranty and could invalidate the assurance of


complying with FAA requirements as published in Ardswory Clear 150/5345-43.

NOTICE: The drawings and photographic images contained herein are the sole property of TWR Lighting, Inc. All information contained herein that is not general known shall be considered confidential except to the extent the information has been previously established. The drawings and photographic images contained herein are the sole property of TWR Lighting, Inc.

Lighting, Inc.

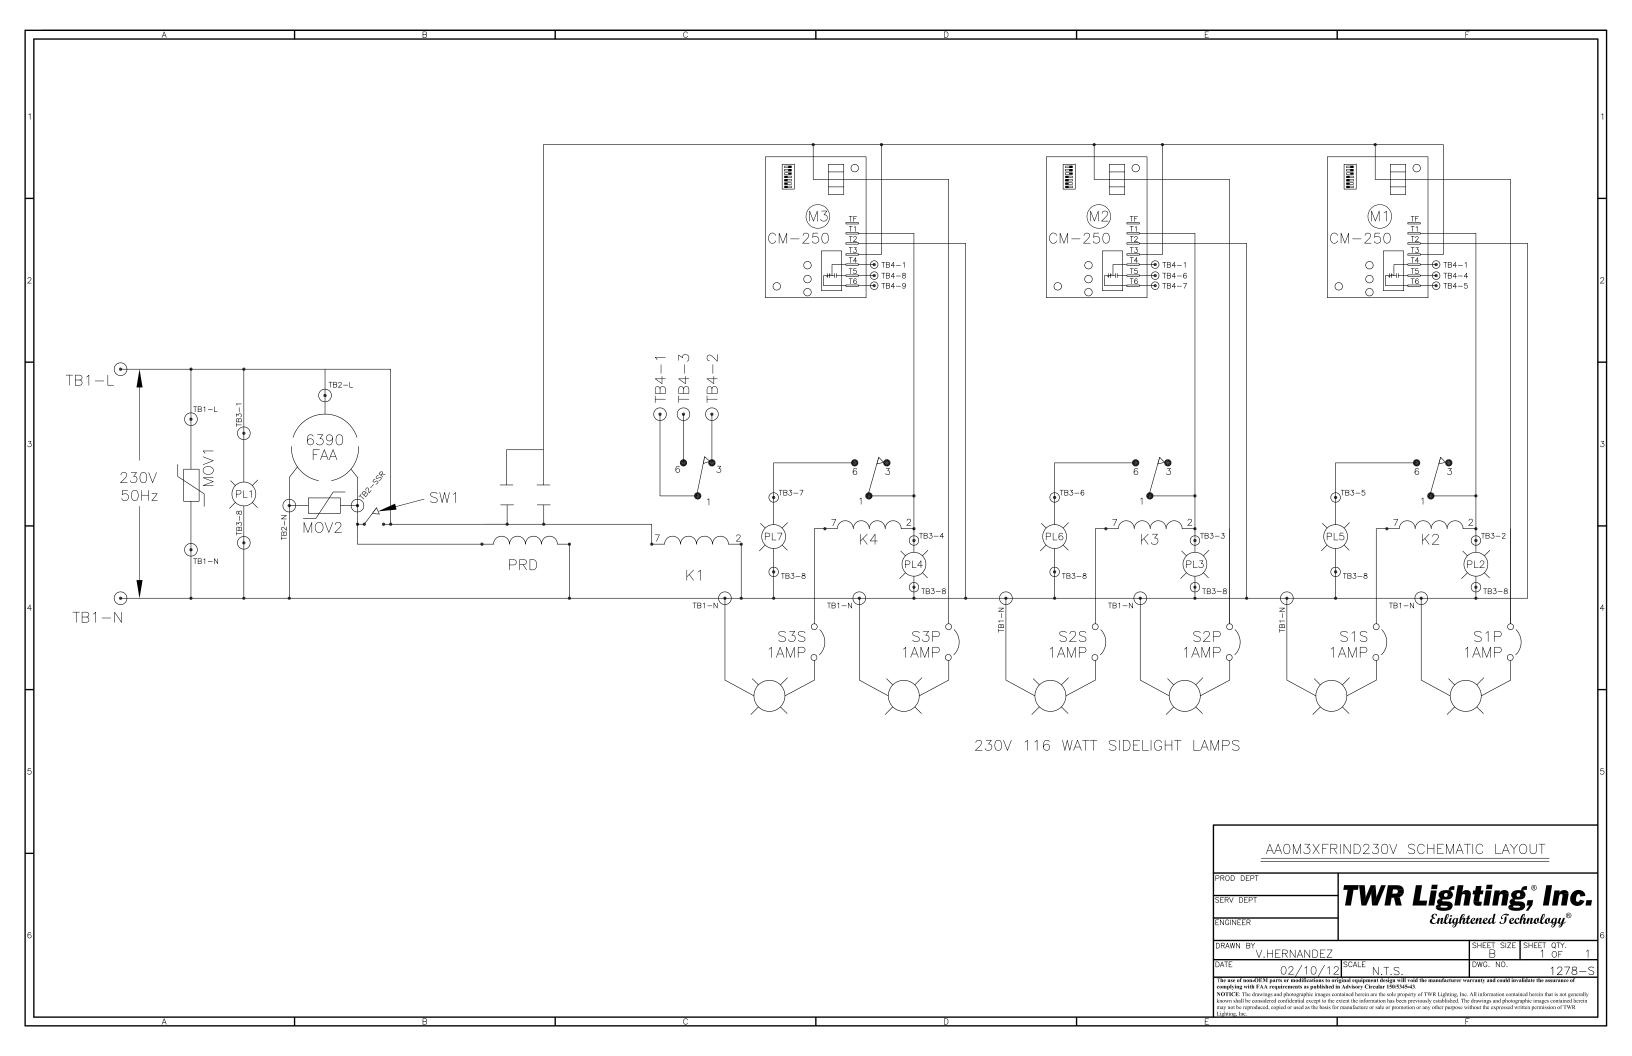

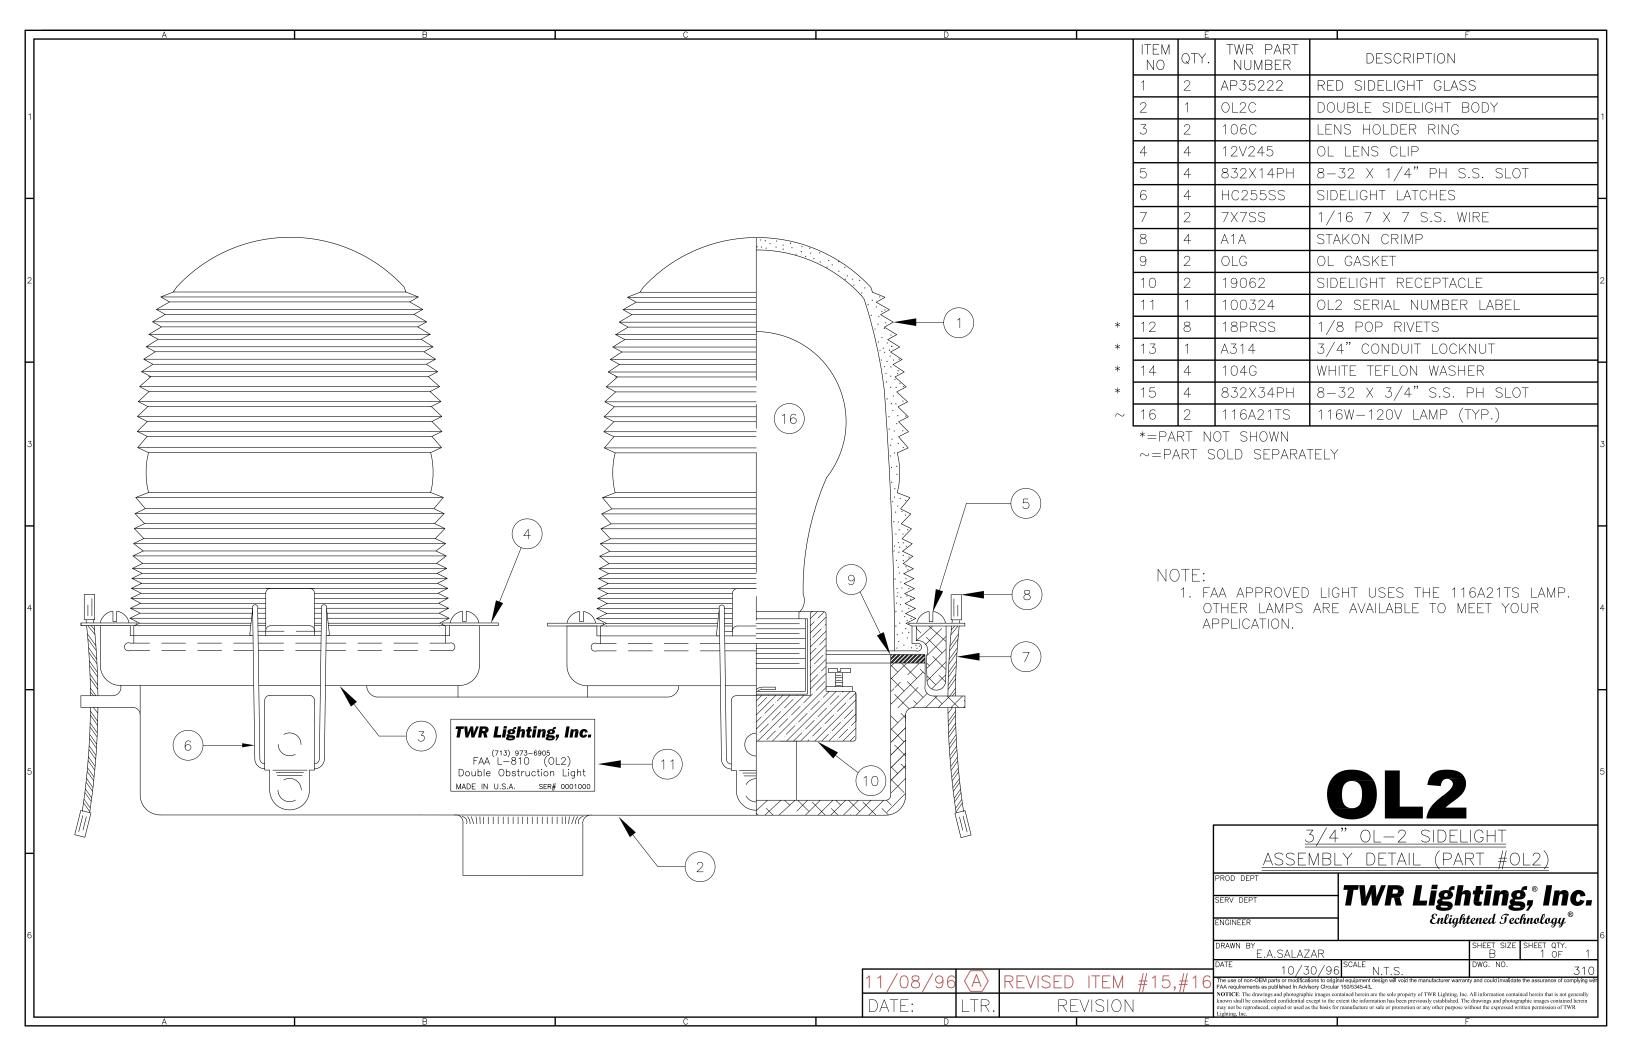

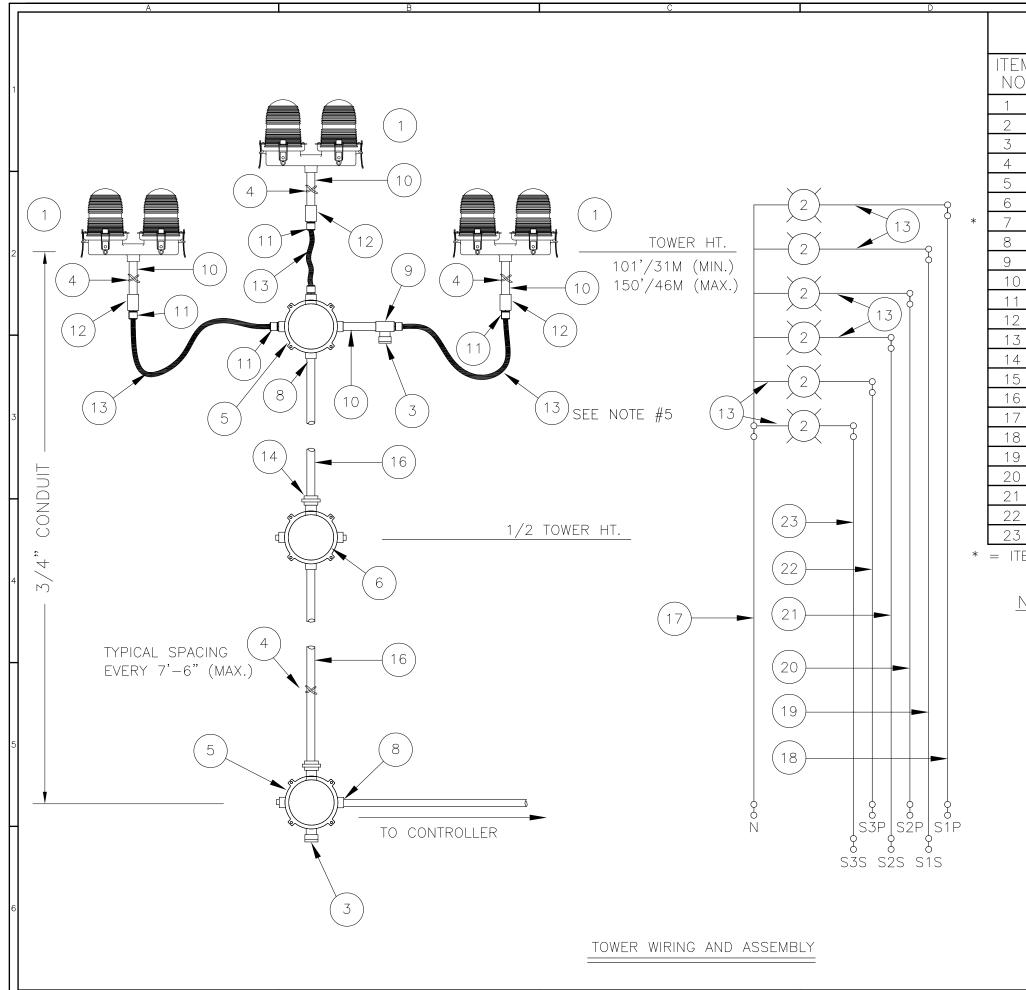

BILL	OF	MATERIALS

ITEM NO.	QTY.	TWR PART NO.	DESCRIPTION
1	3	OL2	DOUBLE OBSTRUCTION LIGHT
2	6	116A21TS230V	116 WATT 230 VOLT LAMP
3	2	5012902	BREATHER
4	1	SS10012	WRAPLOCK
5	2	JB5/7	3/4" JUNCTION BOX
6	1	JB0	3/4" STRAIN RELIEF BOX
7	1	PIPDOP	4 oz. PIPE DOPE
8	7	A314	3/4" CONDUIT LOCKNUTS
9	1	T27CG	3/4" CONDULET W/ COVER AND GASKET
10	3	N34T12	3/4" X 12" CONDUIT NIPPLE
11	6	CGB295SA	3/4" CORD CONNECTOR 0.50 - 0.625
12	3	CPLG34	3/4" CONDUIT COUPLING
13	90'	STCABLEOB	OBSTRUCTION LIGHT CABLE
14	2	UNY205	3/4" UNION
15	1	AAOM3XFRIND	AAOM3XFRIND ALARMED CONTROLLER
16	160'	CONDUIT34	3/4" CONDUIT (TWR HT. + 30'/9M)
17	160'	12THHNWHT	#12 THHN WHITE WIRE
18	160'	12THHNBLK	#12 THHN BLACK WIRE
19	160'	12THHNBLK	#12 THHN BLACK WIRE
20	160'	12THHNBLK	#12 THHN BLACK WIRE
21	160'	12THHNBLK	#12 THHN BLACK WIRE
22	160'	12THHNBLK	#12 THHN BLACK WIRE
23	160'	12THHNBLK	#12 THHN BLACK WIRE

* = ITEM NOT SHOWN

NOTES:

- 1) CONDUIT SIZE BASED ON USING TYPE THHN WIRE.
- 2) USE RIGID GALVANIZED STEEL CONDUIT.
- 3) BREATHERS ALLOW FOR CIRCULATION OF AIR TO PREVENT CONDENSATION.
- 4) LIGHTS SHOULD BE SPACED 120° APART.
- 5) GROUND GREEN WIRE TO THE JUNCTION BOX.

230V


<u>AA</u>	O LIGHTING	KIT AL,	<u>ARMED</u>		
PROD DEPT	TWE	l i «L		s e I m	
SERV DEPT	⊟TWR	Lign	iting	5, III (C.
ENGINEER		Enligh	tened Tec	hnology	
DRAWN BY	DE7		SHEET SIZE	SHEET QTY. 1 OF	1


DRAWN BY V.HERNANDEZ SHEET SIZE SHEET QTY.


DATE 02/24/12 SCALE N.T.S. DWG. NO. T1463

A requirements as putoment in Aurosov (crucuar 160/5049-43).

TICE. The drawings and photographic images contained herein are the sole property of TWR Lighting, Inc. All information contained herein that is not gener was shall be considered confidential except to the extent the information has been previously established. The drawings and photographic images contained here you to be reproduced, copied or used as the basis for manufacture or sale or promotion or any other purpose without the expressed written permission of TWR thing, Inc.

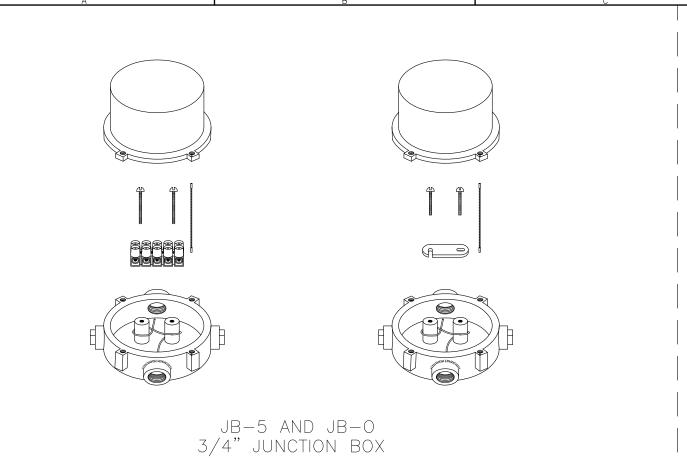

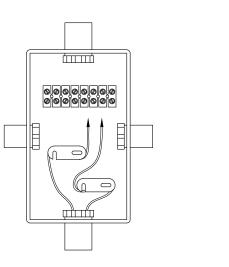

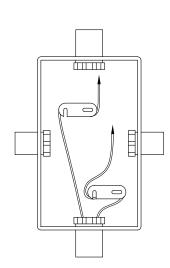

JB-8 AND JB-8SR 1" JUNCTION BOX

USING THIS JUNCTION BOX METHOD SPACING IS 100 FEET MAXIMUM.

AWG WIRE SIZE	MAX. NUMBER WIRES IN 3/4" CONDUIT	MAX. NUMBER WIRES IN 1" CONDUIT	WIRE AREA SQ. INCHES	WEIGHT PER 100 FEET
12 THHN 10 THHN	16 10	26 17	0.0117 0.0184	2.50 4.10
8 THHN	6	9	0.0373	6.70
6 THHN	4	7	0.0519	10.30
4 THHN	2	4	0.0845	16.20

NOTES:

- 1) DRAWING ILLUSTRATES METHOD OF STRAIN RELIEVING WIRE. USE THIS METHOD ON ALL JUNCTION BOXES.
- 2) THE NATIONAL ELECTRICAL CODE—ARTICLE 300—19—B3 REQUIRES CONDUCTORS IN A VERTICAL CONDUIT BE SUPPORTED TO RELIEVE STRAIN ON TERMINAL BLOCK CONNECTIONS.
- 3) SKETCH ILLUSTRATES METHOD OF STRAIN RELIEVING A SINGLE CONDUCTOR. SEVERAL CONDUCTORS MAY BE GROUPED TOGETHER.
- 4) CONDUCTORS MAY BE MIXED BUT SHOULD NOT TAKE UP MORE THAN 40% OF CONDUIT'S INSIDE AREA.

	JUNCTION AND STRAIN RE	LIEF BOXES
	PROD DEPT SERV DEPT ENGINEER TWR Light Enlight	ting, Inc.
	DRAWN BY G.D. SEBEK DATE 07/26/93 SCALE N.T.S.	SHEET SIZE SHEET QTY. B 1 0F 1 DWG. NO. 100089
9/29/00 (A) UPDATED NOTES	The use of non-QEM parts or modifications to original equipment design will voic invalidate the assurance of complying with FAA requirements as published in Advi NOTICE: The drawings and photographic images contained herein are the sole property of TWR Lighting, Inc. shown shall be considered confidential except to the extent the information has been previously established. The may not be reproduced, capied or used as the basis for manufacture or sale or promotion or any other purpose will leithing here.	All information contained herein that is not generally drawings and photographic images contained herein